

Corrected Codes for Programming your TiVo remote

Your TiVo remote has buttons for controlling the Power, Mute, and Volume of your TV. This allows you to set aside your TV remote, and use only the TiVo remote. These buttons need to be set to emit the correct Infrared codes for your Television brand.

Normally, these codes can be found within TiVo's on screen menus, under Setup, TV/AV Setup. However, we are shipping you an improved version of the TiVo remote, and consequently the Infrared codes that are listed in TiVo's on-screen display are incorrect. Please use the codes on this leaflet to program your remote instead.

Instructions:

1. Locate your TV brand on this list. It will have one or more 4-digit codes listed.
2. Cover the end of the remote with your hand to shield the infrared emitter and, on the TiVo remote, press and hold the TIVO and TV POWER buttons simultaneously for about three seconds, until the TiVo remote's LED illuminates. Release the buttons and the LED will remain illuminated.
3. Use the number buttons on your remote to enter the first four-digit code. After pressing the fourth button, the LED will flash three times, indicating that a valid code was entered.
4. Now test the code by pointing your TiVo remote in the direction of the TV and press the TV POWER button. If this turns the TV off, then you have found the correct code. (Your volume and mute buttons will now work as well.) If they don't work, repeat steps 2-3 with the next code in the list.
5. If you have a stereo hooked up to your TV for the audio, you can separately program the Volume and Mute buttons to control your stereo instead. Repeat steps 1-4, using the appropriate code for your stereo, and holding down the TIVO and VOLUME buttons in step 2.

If none of the codes listed work for your TV (or stereo), please call Customer Care at 08702-418486.

CODES FOR STEREO SYSTEMS

ADCOM:1088,1098,1147
AIWA:1022,1025,1110,1141,1142,1182
AKAI:1128
ANAM:1087,1188,1189
B&K:1102,1103
BOSE:1131
CARVER:1015,1034,1037,1060,1068,1148
CLARION:1132
DENON:1003,1041,1111,1149,1150,1151,1152
ENLIGHTENED:1105
EVERQUEST:1032
FISHER:1015,1037,1071,1083
FOSGATE AUDIONIC:1153,1154
GOLDSTAR:1018,1192
HARMAN KARDON:1153,1154
HITACHI:1027,1202
INKEL:1196
JCPENNY:1016,1085,1108
JENSEN:1065
JVC:1020,1122,1161,1162,1163
KENWOOD:1012,1033,1071,1129,1130,1134,1136
LEXICON:1125,1156,1157,1158,1159
LOTTE:1191,1193
LUXMAM:1042
LXI:1084
MAGNAVOX:1034,1092
MARANTZ:1013,1034,1047,1063,1070,1072,1093,1203
MCINTOSH:1160
MCS:1016,1085
MITSUBISHI:1164,1165
NAD:1036,1055
NAKAMICHI:1117,1167
NILES:1168
ONKYO:1024,1053,1113,1114,1121,1179
OPTIMUS:1029,1033,1048
PANASONIC:1014,1039,1094,1194,1200
PHILIPS:1034,1044,1093,1171,1172,1173
PIONEER:1001,1021,1046,1051,1052,1054,1057,1073,1076,1096,1104,1144

STEREO SYSTEMS (con't)

QUASAR:1014,1094
RCA:1056,1123
REALISTIC:1002,1011,1026,1030,1079,1081,1084,1086,1087,1101
ROTEL:1080,1089,1091
SAMSUNG:1197,1198,1199
SANSUI:1034,1047,1116,1119,1124,1146
SANYO:1187
SCOTT:1026,1087,1097
SHARP:1033,1058,1064,1100,1127,1132,1133,1134,1135
SHERWOOD:1031,1045
SONY:1025,1059,1090,1095,1099,1107,1145,1169,1170
SOUNDESIGN:1043
SSI:1075
TAEKWANG:1128,1184,1186,1195
TEAC:1026,1066,1067,1087,1143,1190
TECHNICS:1014,1094,1109,1115,1126,1137
TOSHIBA:1118
VICTOR:1020,1112
WARDS:1071
YAMAHA:1028,1033,1038,1074,1132,1175,1201
ZANTEK:1174